



WideTEK® 12

WideTEK® 25



Setup Instructions

English

10/2016

Contents

Information on the Instructions and the Manufacturer.....	4
Keep Instructions with the Scanner.....	4
Design Features in Text.....	5
Design Features in Pictures.....	5
Associated Documents	6
Copyright	6
Contact Data of the Manufacturer in Germany.....	6
Technical Support	6
Contact Data of the Manufacturer in the U.S.....	6
Safety	7
Intended Use	7
Basic Safety Information.....	7
Avoiding Property Damage and Malfunctions.....	8
Responsibility of the Owner	9
Staff Qualifications	9
Design Features of Warning Notices	10
Formatting of Information Regarding Property Damage	10
Description	11
Purpose and Function.....	11
Scanner Overview	11
Rear View of the WideTEK 12	12
Rear View of the WideTEK 25	13
Setup Menu Overview Screen	14
Type Plate	15
Prepare for Setup.....	17
Remove the Transport Locks	17
Connect the Power Supply	18
Establish the Network Connection	19
Connect the Optional Foot Switch.....	19

Connect the Optional Monitor	20
Connect the Optional Touchscreen	20
Switch On the Scanner	21
Perform Setup	23
Change the Menu Language	23
Activate the Setup Menu	25
Perform White Balance	29
Assign the IP Address	37
Modify User Settings	45
Set the Time and Date	53
Perform Test Suite	58
Touchscreen Test	63
Switch Off the Scanner	65
Technical Specifications	67
WideTEK® 12 Scanner Specifications	67
WideTEK® 25 Scanner Specifications	68
Ambient Conditions	69
Electrical Data	69
Dimensions and Weight WideTEK® 12	70
Dimensions and Weight WideTEK® 25	70

Information on the Instructions and the Manufacturer

These instructions show you how to safely prepare and perform the setup for the flatbed scanners WideTEK® 12 and WideTEK® 25. The flatbed scanners WideTEK® 12 and WideTEK® 25 are hereinafter referred to as "Scanner".

In these instructions, the start button is called "power button".

Keep Instructions with the Scanner

These instructions are a part of the scanner.

- Please always store these instructions together with the scanner.
- Ensure that the instructions are available for the user.
- Enclose the instructions when you sell the scanner or transfer it in any other way.

Design Features in Text

Many text passages in these instructions have been formatted to indicate specific elements, as illustrated below:

Normal text

BUTTONS OF THE SCREEN PAGE

"Menu names"

➤ Action steps


- Enumeration of the first level

Cross-references

❶ Tips contain additional information, such as special information to prepare for and perform the setup.

Design Features in Pictures

Where a reference is made to elements in a legend or in the text, these are marked with a number (1).

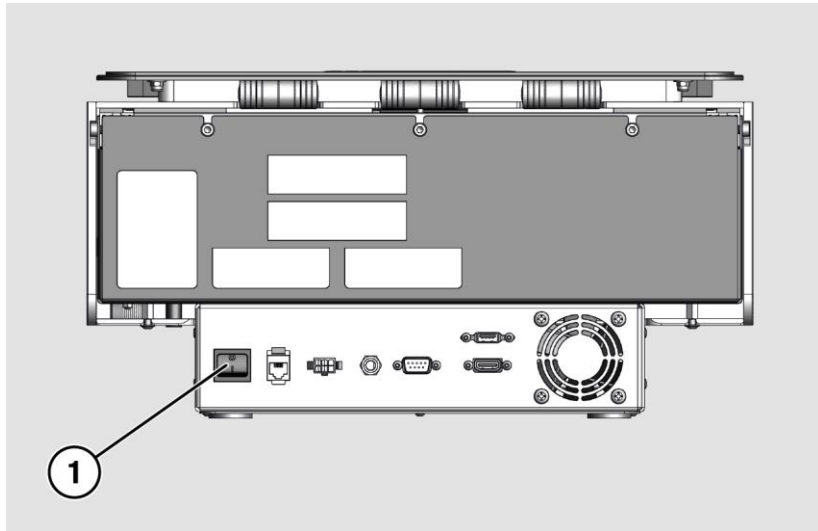

Associated Documents

In addition to these instructions, other documents associated with the operation of the scanner include:

- Unpacking and Repacking Instructions
- Legal Information (Declarations of Conformity, FCC Declaration, Safety & EMI Certificates, RoHS etc.).

Copyright

These instructions contains information that is subject to copyright. These instructions may not be reproduced in any form, printed, filmed, edited, copied or distributed, in whole or in part, without prior written permission of Image Access GmbH.

© Image Access GmbH 2016

All rights reserved.

Contact Data of the Manufacturer in Germany

Image Access GmbH

Hatzfelderstraße 161-163

42281 Wuppertal

Phone: +49-202-27058-0

E-Mail: documentation@imageaccess.de

Internet address: www.imageaccess.de

Technical Support

Image Access technical support can be reached at the e-mail address: support@imageaccess.de.

Contact Data of the Manufacturer in the U.S.

Image Access LP

745 Duffy Drive, Unit D

Crystal Lake

IL 60014

Phone: +1-779-220-4662

E-Mail: support@imageaccess.us

Internet address: www.imageaccess.us

Safety

Intended Use

The scanner is used for scanning images and documents. It is designed for use in enclosed spaces in the commercial sector.

Intended use also includes observing and following all instructions in these instructions, especially the safety instructions. Any other use is considered to be improper and will void the warranty and liability claims.

Ambient Conditions

Ensure that the scanner is used exclusively under the following environmental conditions:

- Ambient temperature during operation: +5 °C to +40 °C
 - Storage temperature: 0 °C to +60 °C
 - Relative humidity: 20 to 80%, non-condensing
- Ensure that the scanner is not exposed to direct sunlight.

Basic Safety Information

Avoid Injury or Death by Electric Shock

- Never open the housing of the scanner.
- Do not expose the scanner to dripping or splashing water and do not place any vessel filled with liquid on the scanner. Penetrating liquid can damage the scanner.
- Do not insert objects through existing slots or openings into the interior of the scanner.
- Only connect the scanner with the plug of the supplied AC adapter to a professionally installed and grounded outlet.
- Do not use the AC adapter if the power supply's housing or the cable are damaged. In this case, replace the power supply with a power supply of the same type.
- Do not use the scanner if it is visibly damaged. In this case, unplug the power cord from the wall outlet. Contact Image Access technical support, see section *Technical Support* starting at page 6.

Avoid Burns

- Do not cover the existing openings in the scanner housing. They serve to ventilate. Covering the openings could cause overheating.
- Do not place the scanner in front of air conditioning units, which produce high heat.

Avoid Cuts

The glass plate on the scanner is only suitable for the weight of documents. Objects or body parts with higher weights can destroy the glass plate and cause cuts.

- Ensure that the weight of the original to be scanned does not exceed 10 kg.

Avoid Fractures, Contusions and Bruises

Incorrect installation of the cables can cause tripping.

- Lay the connecting cables so that no one can trip over them.

The scanner weighs between 28 and 40 kg, depending on the model.

- Only carry the scanner with a second person.
- Place the scanner only on a stable, level and vibration-free surface that has sufficient strength for the weight of the scanner.

Avoiding Property Damage and Malfunctions

- Ensure adequate ventilation to comply with the environmental conditions.
- Prior to initial installation, remove the mounted transport locks.
- Install the transport locks before transporting the scanner to a new location.
- Do not place the scanner in the vicinity of devices that emit strong electromagnetic radiation.
- Do not use any cleaning agents containing abrasive additives, solvents or acids. Use a damp microfiber cloth.
- Operate the touchscreen only with your finger. Other objects can damage the touchscreen.

Responsibility of the Owner





The scanner owner must ensure that only qualified personnel carry out the setup of the scanner.

Staff Qualifications

The staff that carries out the setup of the scanner must have knowledge in installing, connecting and putting computer accessories into operation.

Design Features of Warning Notices

In these instructions, the following warning information can be found:

 WARNING	
	Messages with the word WARNING warn about a dangerous situation that could lead to death or serious injuries.
 CAUTION	
	Notices with the word CAUTION warn about a situation that could lead to light or medium-scale injuries.

The following symbols are used in the warnings:

Symbol

Explanation



Danger from electrical shock



General danger symbol

Formatting of Information Regarding Property Damage


ATTENTION!	
	This note warns of situations that can lead to property damage.

Description

Purpose and Function


The scanner is used for scanning images and documents. It is designed for use in enclosed spaces in the commercial sector.

Scanner Overview

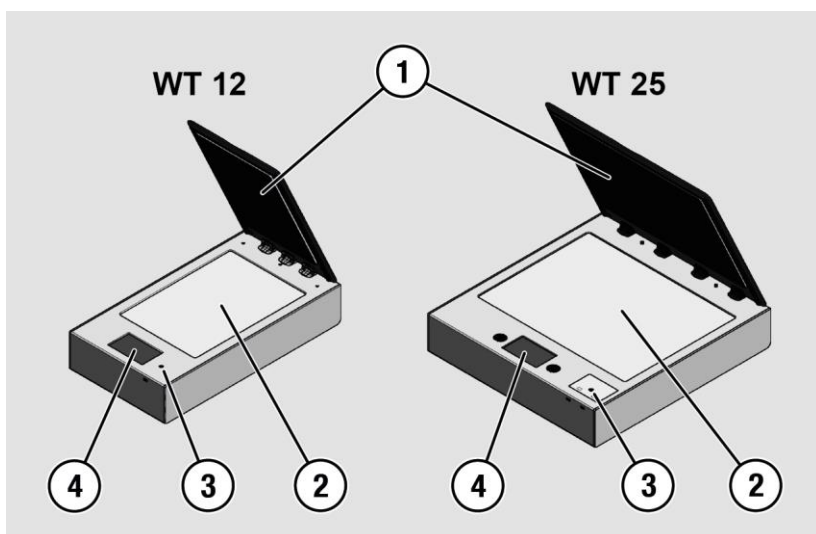


No.	Name
1	Cover
2	Glass plate
3	Power button
4	Touchscreen

Rear View of the WideTEK 12

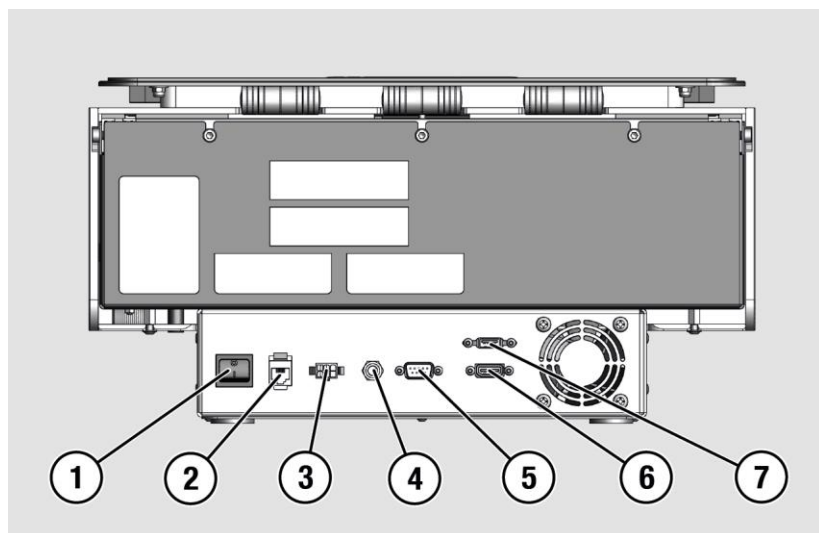


No.	Name
1	Main switch
2	Network connector
3	24 V DC connector for external power supply
4	Foot switch connector
5	Recovery key connector
6	HDMI connector
7	USB connector

Rear View of the WideTEK 25

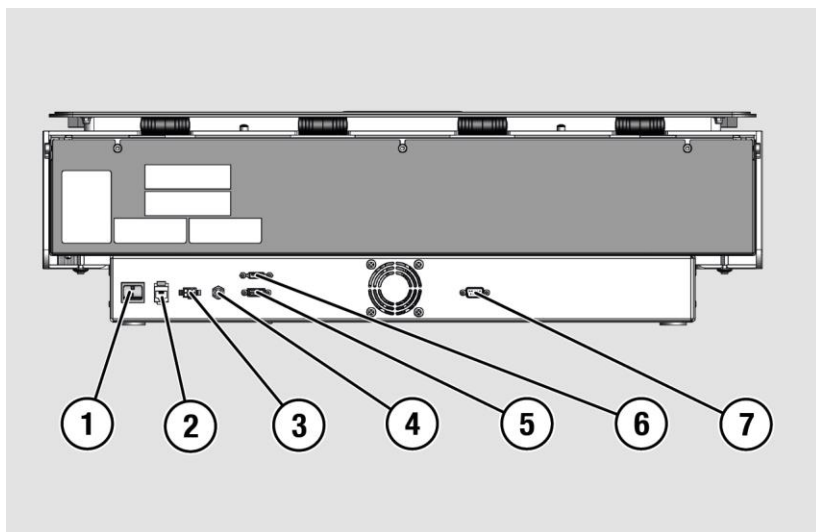

No.	Name
1	Main switch
2	Network connector
3	24 V DC connector for external power supply
4	Foot switch connector
5	HDMI connector
6	USB connector
7	Recovery key connector

Setup Menu Overview Screen

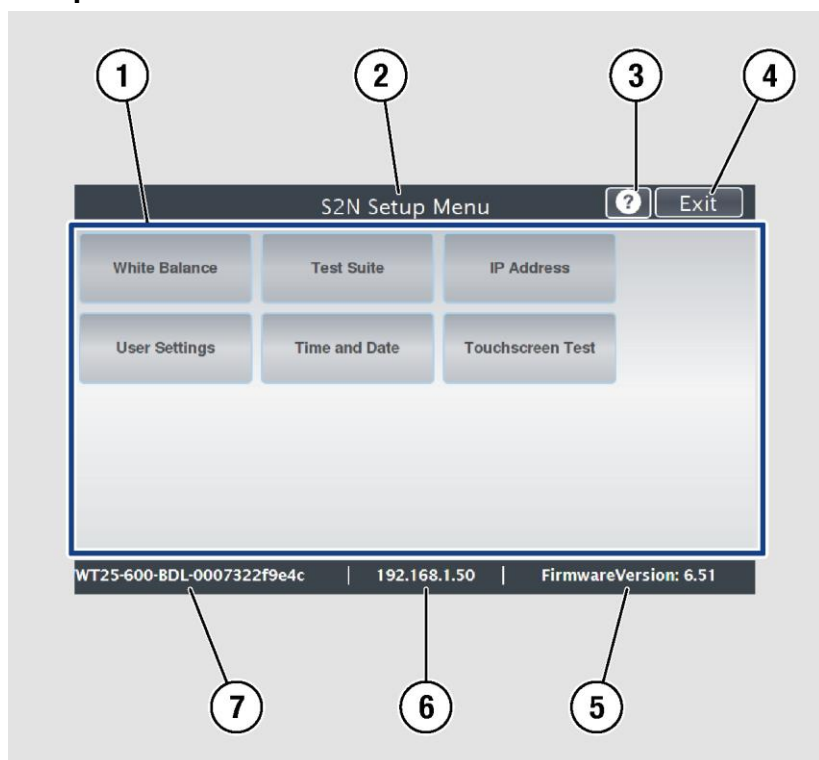

No.	Name
1	Buttons and parameters
2	Menu name
3	Display the online help ¹
4	Button to leave the setup menu to the start screen
5	Firmware version
6	IP address
7	Serial number

¹ The display of the online help is only available when a second touchscreen is connected to the scanner.

- ❶ Future developments of the scanner operating system may cause slight discrepancies in the user interface.

Type Plate

The type plate is attached to the back of the scanner.

The following figure shows the WideTEK® 12 type plate.



Description

The following figure shows the WideTEK® 25 type plate.

Type/品类: Flatbed Scanner/平板扫描仪
Model/型号: WT25-600
Volt/电压: 24DC **Amperes/电流:** 5

  Conforms to: 
 ANSI/UL60950
 Certified to: CAN/CSA60950-3171507
 Intertek

Self Declaration: Conforms to IS 13252 (Part 1):2010, R-41006580

 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference
 (2) this device must accept any interference received, including interference that may cause undesired operation.

 **Made in Germany 德国制造**
 Image Access GmbH, Wuppertal
www.imageaccess.de


Serial No./Manufacturing Date on Barcode Label

Prepare for Setup

Remove the Transport Locks

The scanner is equipped with two transport locks. Transport locks are located on the bottom left and right, each characterized by a plastic tab (1).

The following figure shows the WideTEK® 12 model.

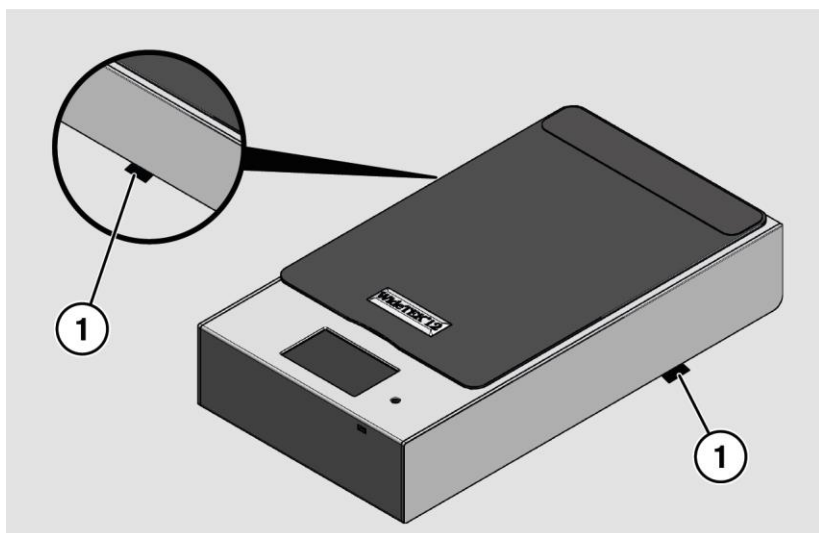

You must remove the transport locks before using the scanner for the first time. To remove the transport locks, proceed as follows:

- Screw the two transport locks counterclockwise completely out of the scanner.
- Keep the transport locks for future use.

Connect the Power Supply

WARNING



Risk of electric shock due to incorrect connection.

- Ensure that the power receptacle intended for the connection is properly grounded.
- Ensure that the power receptacle intended for the connection of the scanner is secured.

CAUTION



Incorrect laying of the connection cables can cause tripping. Fractures, contusions and bruises can be the result.

- Place the connecting cables so that nobody can trip over them.

To connect the power supply, proceed as follows:

- Make sure that the main switch of the scanner is switched off (0 position).
- Use only the AC adapter and power cord supplied.
- Ensure the power cord is not damaged.
- Connect the connector from the power supply to the associated 24 V DC connector on the back of the scanner.
- If not already done, connect the supplied power cable to the associated connector on the power supply.
- Connect the power plug of the power supply to a power receptacle of the correct voltage (100-240 VAC).

Establish the Network Connection

CAUTION



Incorrect laying of the connection cables can cause tripping. Fractures, contusions and bruises can be the result.

- Place the connecting cables so that nobody can trip over them.

To establish the network connection, proceed as follows:

- Connect one plug of the enclosed network cable to the network connector socket on the back of the scanner.
- Connect the second plug to the network socket of an existing network.

Connect the Optional Foot Switch

CAUTION





Incorrect laying of the connection cables can cause tripping. Fractures, contusions and bruises can be the result.

- Place the connecting cables so that nobody can trip over them.

To connect the optional foot switch, proceed as follows:

- Connect the plug of the foot switch to the connector socket for the foot switch, located on the back of the scanner.



Connect the Optional Monitor

 CAUTION	
	<p>Incorrect laying of the connection cables can cause tripping. Fractures, contusions and bruises can be the result.</p> <ul style="list-style-type: none"> ➤ Place the connecting cables so that nobody can trip over them.

To connect the optional monitor, proceed as follows:

- Connect the HDMI connector plug of the monitor to the HDMI connector socket, located on the back of the scanner.

Connect the Optional Touchscreen

 CAUTION	
	<p>Incorrect laying of the connection cables can cause tripping. Fractures, contusions and bruises can be the result.</p> <ul style="list-style-type: none"> ➤ Place the connecting cables so that nobody can trip over them.

To connect the optional touchscreen, proceed as follows:

- Connect the HDMI connector plug of the touchscreen to the HDMI connector socket, located on the back of the scanner.
- Connect the USB connector plug of the touchscreen to the USB connector socket, located on the back of the scanner.

Switch On the Scanner


ATTENTION!

Damage to the scanner can be caused by a transport lock not removed prior to initial installation.

- Ensure that both transport locks are completely removed from the scanner.

To switch on the scanner, proceed as follows:

- Press the MAIN SWITCH (1) on the back to the "I" position.

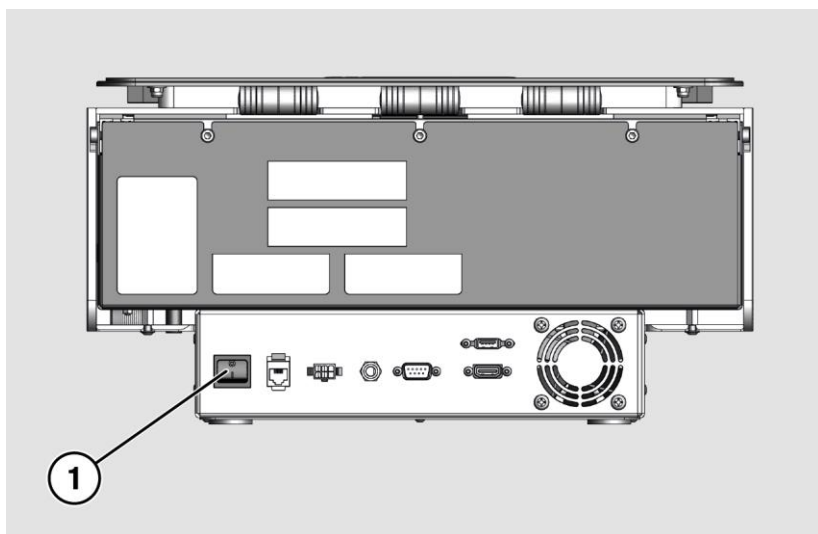


To start the scanner from standby mode, proceed as follows:

- Press the red illuminated power button.

The power button lights up in blue.

The scanner performs a system test. After a short wait, the "Start screen" is displayed in English.

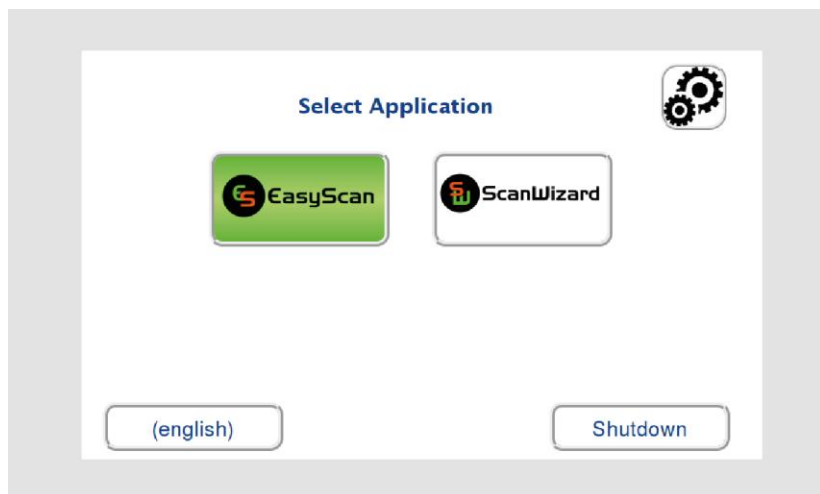

Perform Setup

Change the Menu Language

To change the menu language, proceed as follows:

- Tap the LANGUAGE (1) button.



A window for selecting the language appears.

- To display more languages, slide the scroll bar (1) downward.




- Tap the desired language.

The window for selecting the language is closed. The "Start screen" is displayed.

Activate the Setup Menu

To activate the setup menu, you have to log in on the scanner. Proceed as follows:

- Tap the GEAR SYMBOL (1).

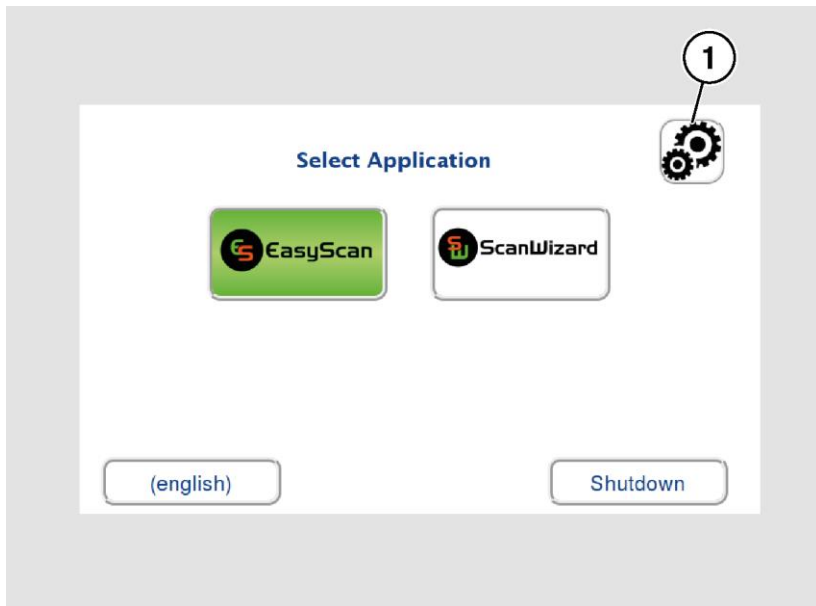


The login window appears.


- In the login window, enter the login credentials.
- To enter the credentials, tap with your finger on the corresponding input field.

The screen keyboard is displayed.

- Enter the word "Poweruser" in the fields "Username" (1) and "Password" (2).
- When entering, please note that the input is case sensitive.

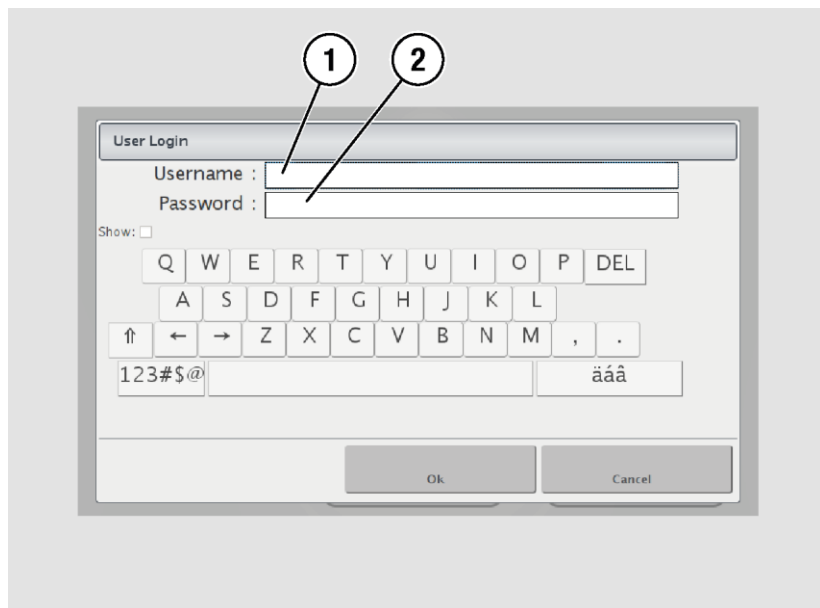

- To complete the entry, press OK (1).

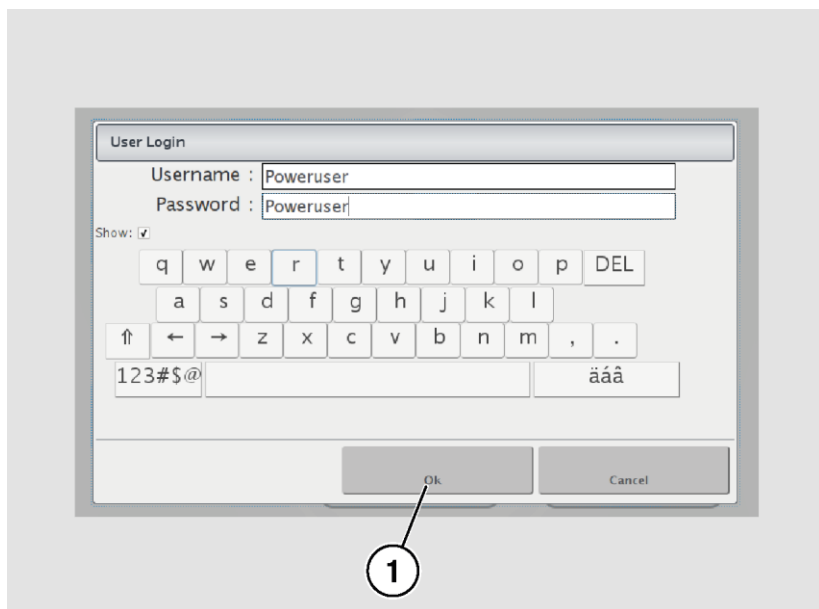

The "Setup Menu" screen is displayed.




White Balance:	Display the "White balance" submenu
Test Suite:	Display the "Test Suite" submenu
IP Address:	Display the "IP Address" submenu
User Settings:	Display the "User Settings" submenu
Time and Date:	Display the "Time and Date" submenu
Touchscreen Test:	Display the "Touchscreen Test" submenu


- To select a submenu from the "Setup menu" screen, tap with your finger on the button of the screen.

Perform White Balance

- On the "Setup Menu" screen, tap on WHITE BALANCE (1).

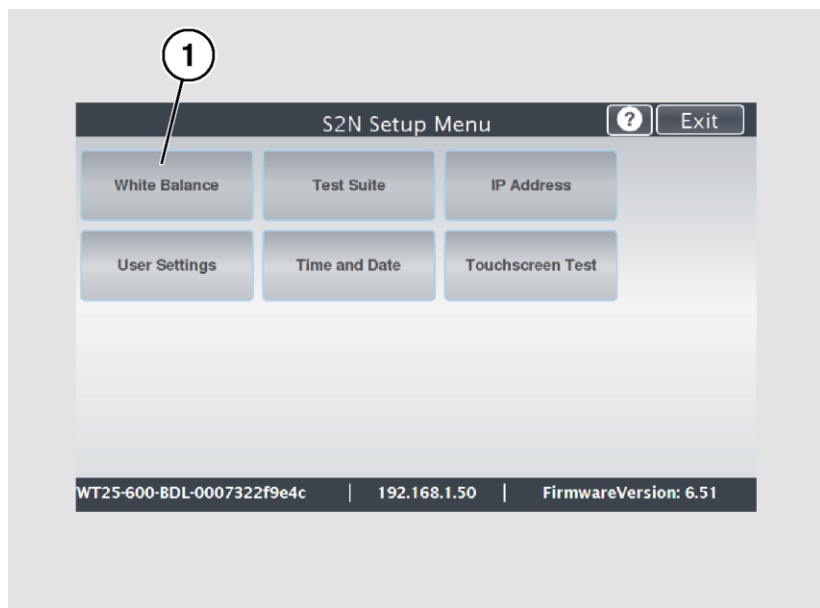

The "White Balance" screen is displayed.

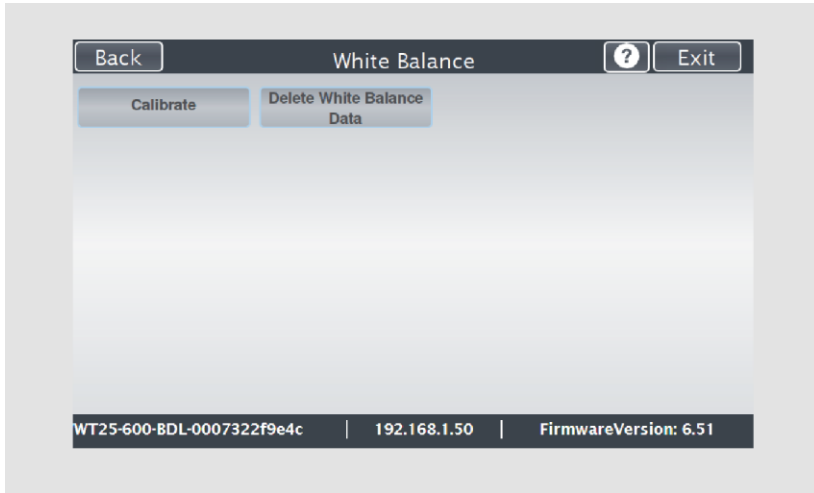

Calibrate:	Start white balance
Delete White	Delete existing white balance data
Balance Data:	

The white balance is used to ensure the quality of the scan results. The white balance will be carried out using a test target. The test targets are marked as follows:

- WT12-WA-01-A for WideTEK® 12
- WT25-WA-01-A for WideTEK® 25.

ATTENTION!

Impairment of the scan quality can occur if an improper test target for the white balance is used.


- Make sure that the test target is free from wrinkles, discolorations, cracks or other damage.
- Store the test target for the white balance in a safe place protected from daylight.

To perform the white balance, proceed as follows:


- Open the cover (1) of the scanner.
- Insert the supplied test target (2) with the writing or test strips facing down toward the camera at the top of the glass plate.

The test target (2) covers the entire width of the glass plate.

The following figure shows the model WideTEK® 12.

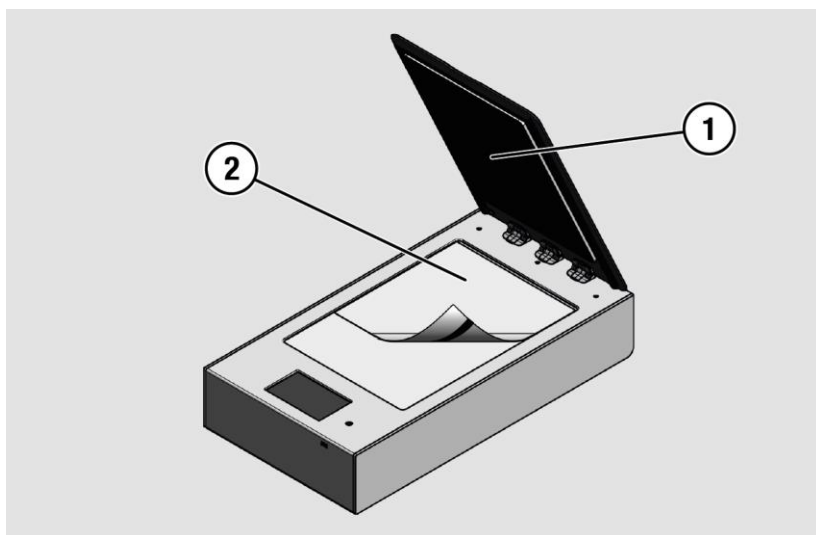


- Close the cover of the scanner.
- Tap on CALIBRATE (1).

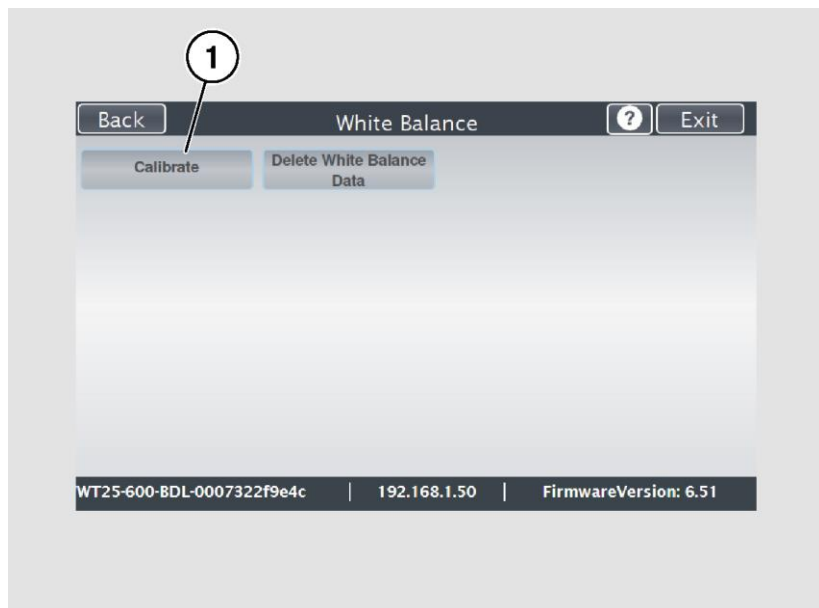


- Tap on NEXT STEP (1).


The following figure shows the model WideTEK® 25.

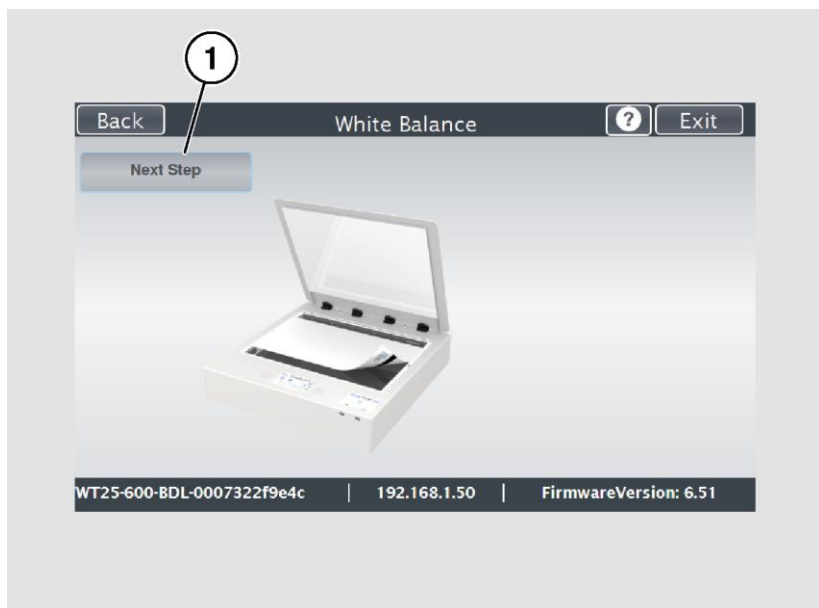


The white balance starts and the calibration is performed. During the white balance, a rotating icon appears. The entire white balance sequence takes about 40 seconds.

Then, the white balance result is displayed as shown on the example below.

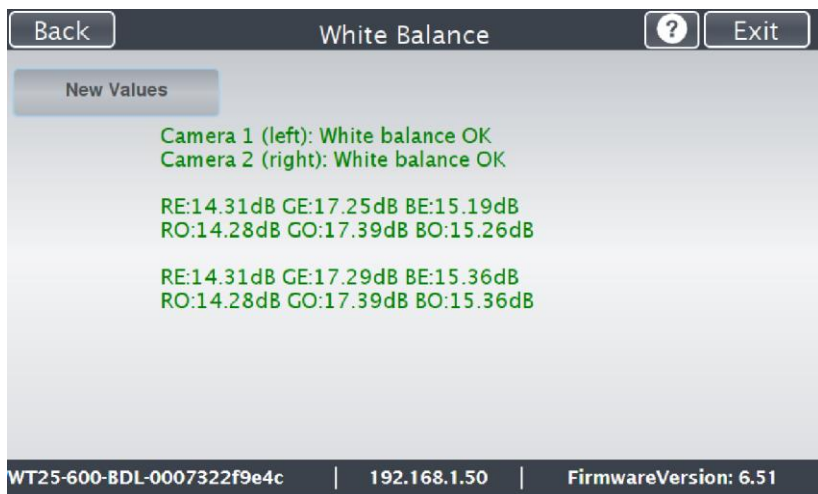


-  On an error-free white balance calibration, the result is displayed in green.
An incorrect result is displayed in red. If this is the case, the white balance starts over again.

- To perform the white balance again, tap NEW VALUES (2).
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (3).

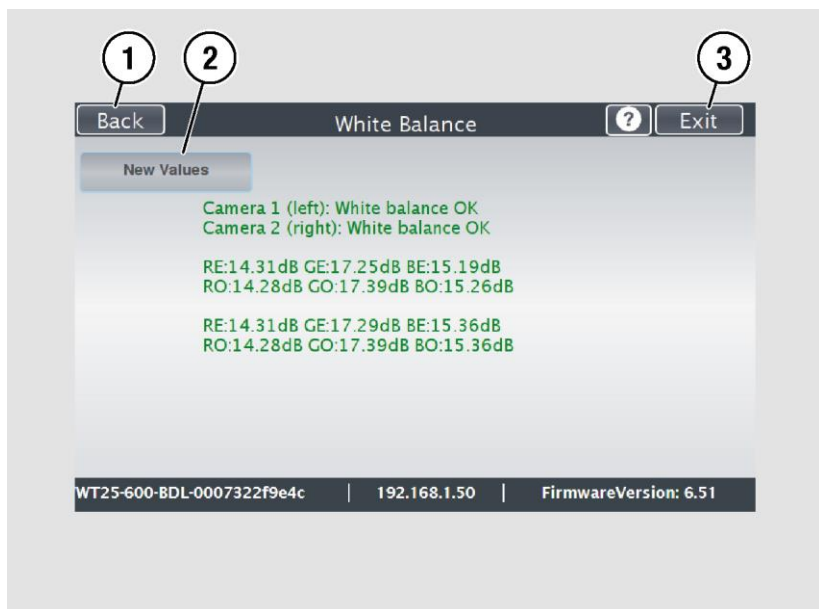

- To delete the stored data of the white balance calibration, tap DELETE WHITE BALANCE DATA (2).
- After deleting the stored data, run the white balance again, as described.
- If problems arise during the white balance calibration, contact Image Access technical support, see section *Technical Support* starting at page 6.
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (3).

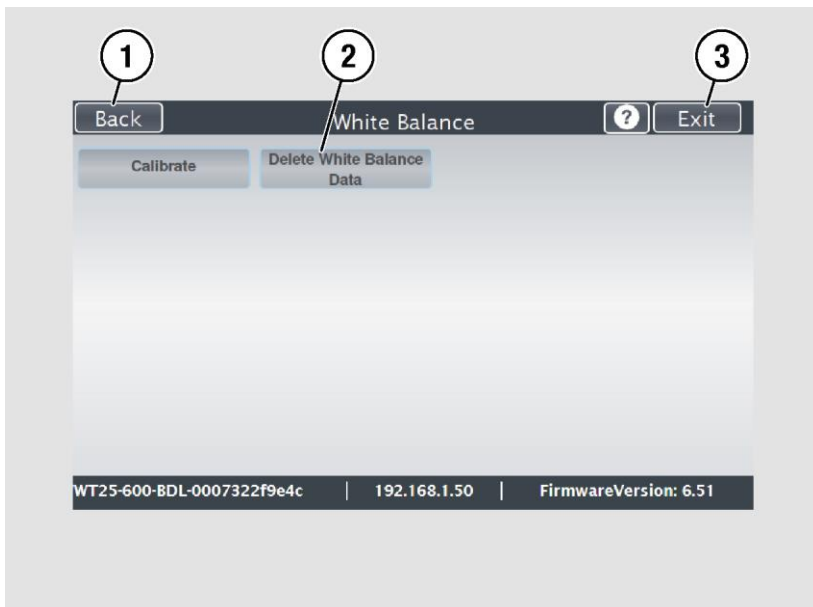

The "Start screen" is displayed.

After a successful white balance, proceed as follows:


- Remove the test target.
- Store the test target in a place which is protected from daylight.
- Ensure that the test target is not damaged, bent or soiled.

Assign the IP Address


Manually Assign the IP Address

To manually assign the IP address, proceed as follows:

- On the "Setup Menu" screen, tap on IP Address (1).

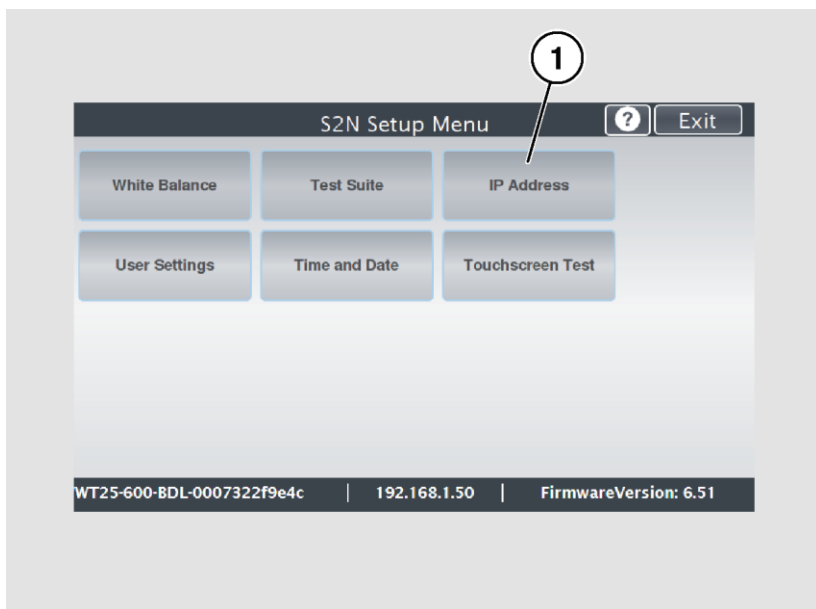

The "IP Address" screen is displayed.

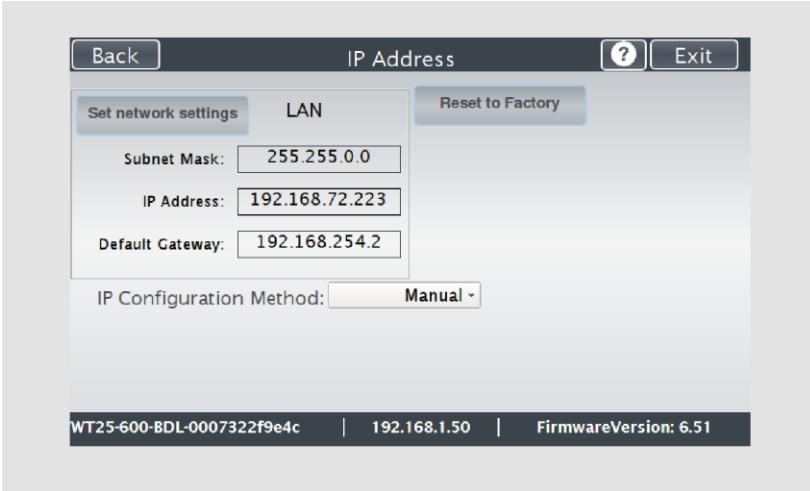

Set network settings:

Accept the network settings provided

Reset to Factory:

Reset to Factory settings

Subnet Mask:

Input field for data on the subnet mask

IP Address:

Input field for the IP address

Default Gateway:


Input field for the gateway address

IP Configuration Method

Assign an IP address manually or automatically


Input/DHCP:

- Tap the "IP Address" (1) field.

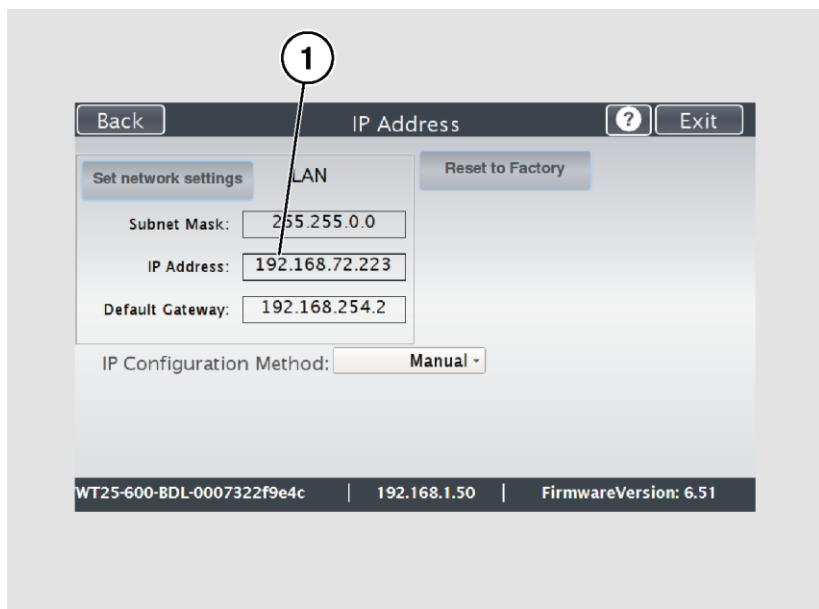


The "IP Address" window is displayed.

➤ Enter the IP address (1).

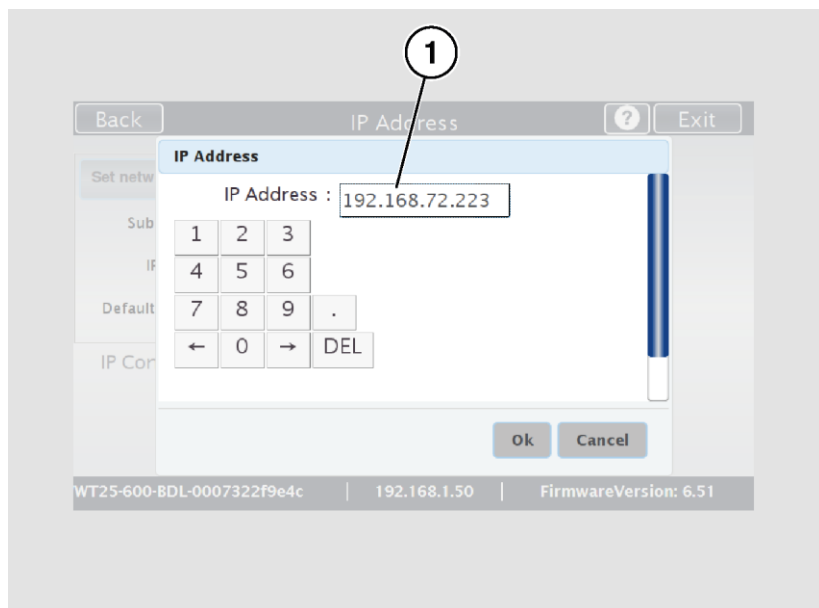


- To delete a digit, move the cursor to the right in front of the number and tap DEL (1).

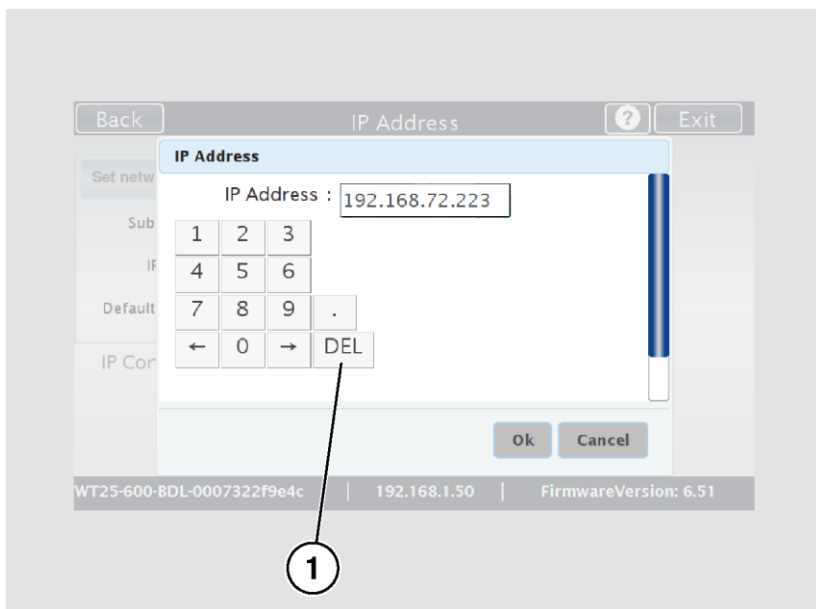


The arrow keys left (1) and right (2) next to the number "0" move the cursor within the chosen row.

- To complete the entry, press OK (3).
- Perform the settings for gateway and subnet mask in the same way.

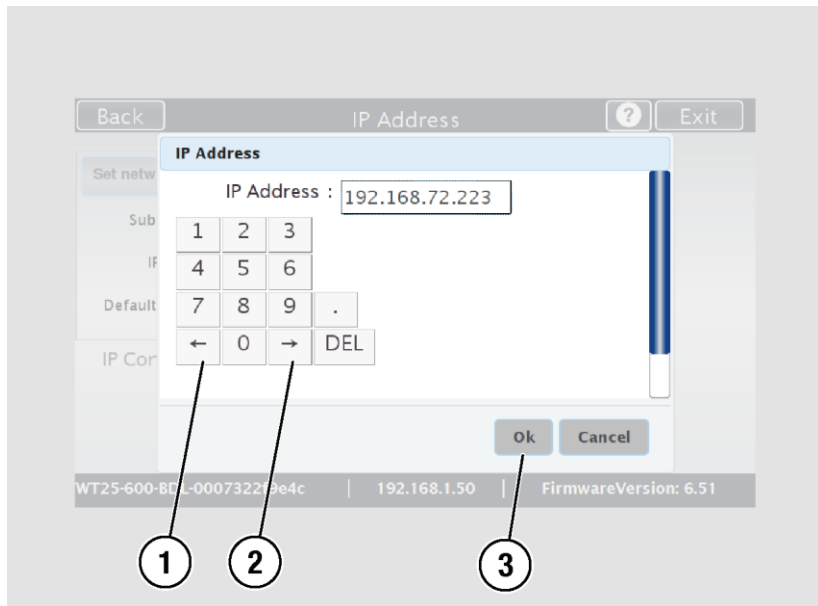

- To save the network settings, tap SET NETWORK SETTINGS (2).
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (3).

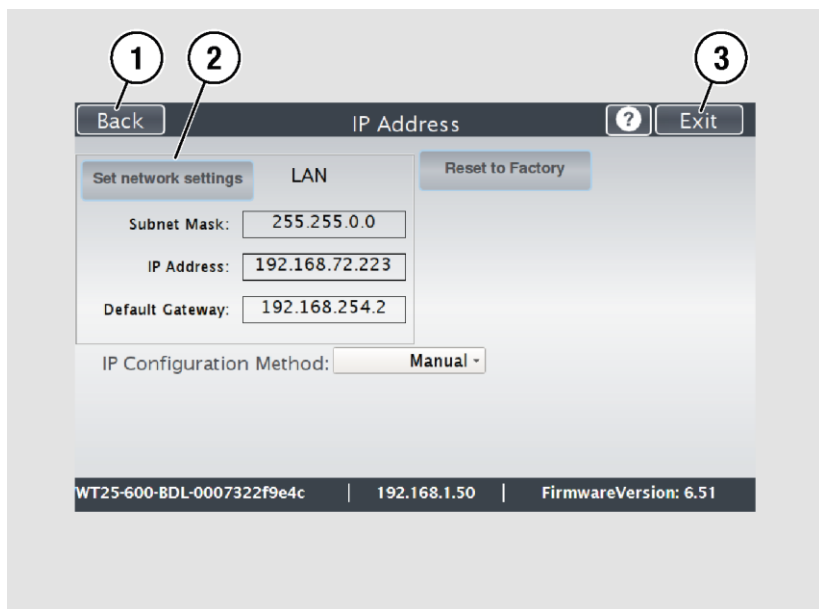


The "Start screen" is displayed.

Automatically Assign the IP Address

To automatically assign the IP address, proceed as follows:


- In the selection menu "IP Configuration Method", select the "DHCP" (3) entry.
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (2).

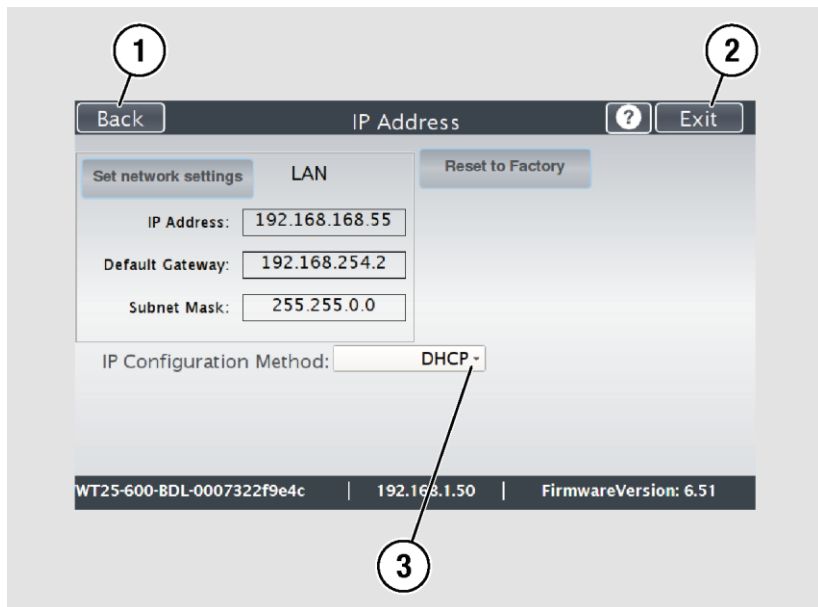


The "Start screen" is displayed.

Modify User Settings

➤ On the "Setup Menu" screen, tap on USER SETTINGS (1).

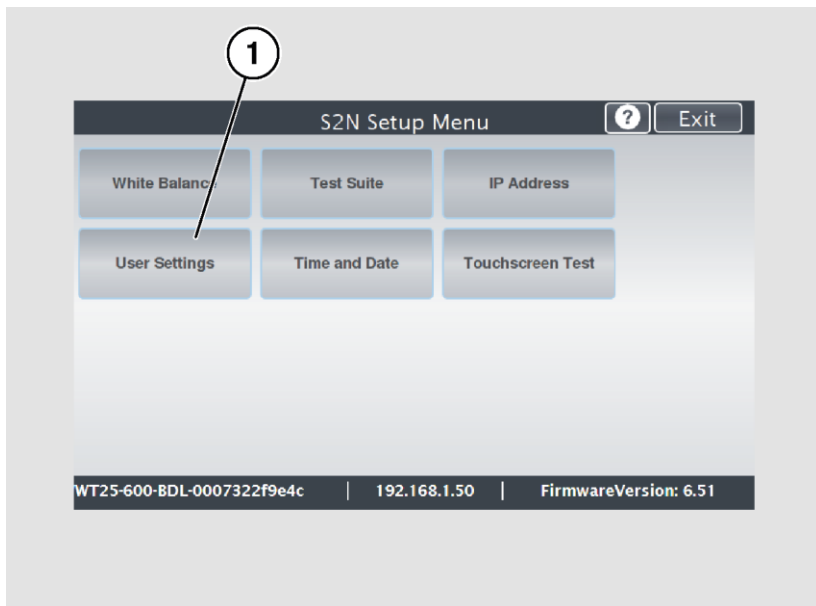

The "User Settings" screen is displayed.

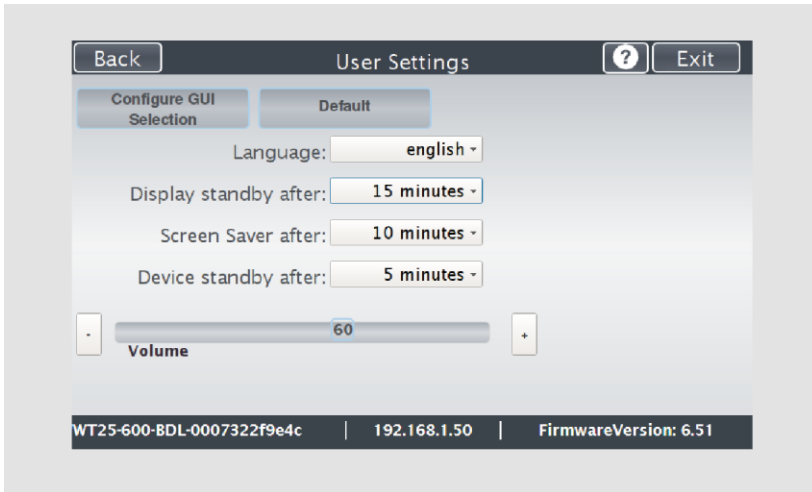


Configure GUI Selection:	Open the submenu for setting the application in the start screen
Default:	The scanner default settings have been established again
Language:	Select language
Display standby after:	Define the period of inactivity, until an optional external monitor and the touchscreen switch to the standby mode
Screen Saver after:	The period of inactivity is defined until the screen saver is activated
Device standby after:	The period of inactivity is defined, until the scanner goes into standby mode
Volume:	Adjust the volume of system sounds

Select Language

To select the language, proceed as follows:

- Tap the on the selection arrow of the selection menu "Language" to display the list of languages.
- Tap the desired language (2).
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (3).

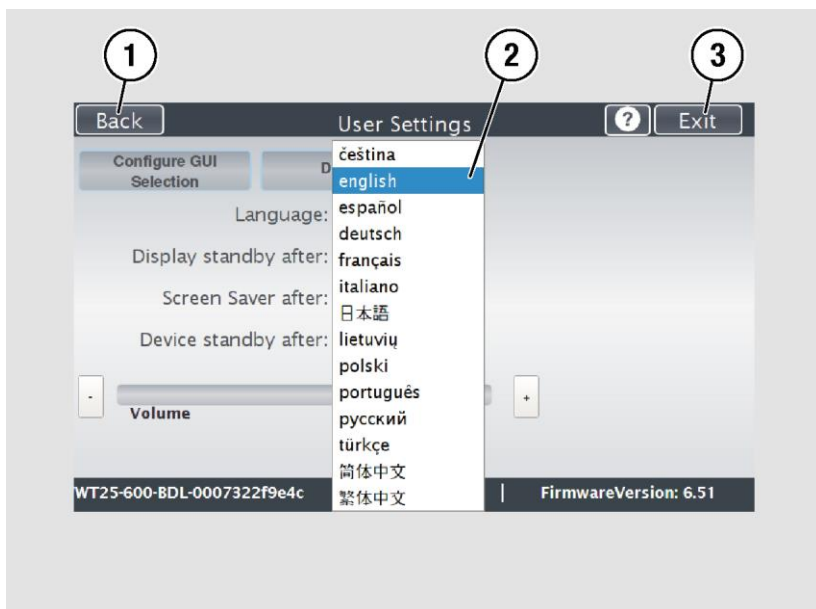

The "Start screen" is displayed.


Set Standby Times

To set the standby times, proceed as follows:

- Tap the selection arrow of the selection menu.
- Tap on the desired entry (2).

Perform Setup

- Perform the settings for the screen saver and the device standby in the same way.
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (3).

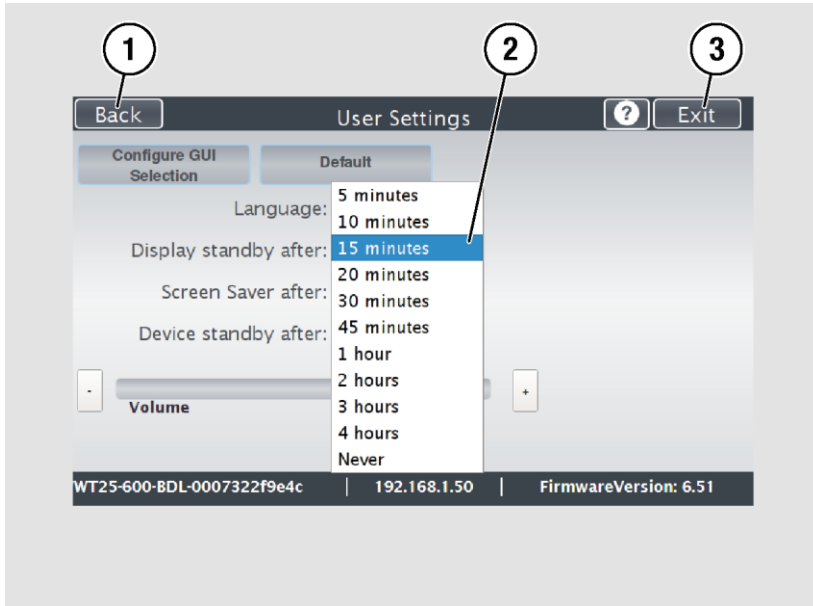

The "Start screen" is displayed.

Adjust Volume


To adjust the volume of the system sounds of the scanner, proceed as follows:

- Slide the volume control (4) to the desired position.

In the "0%" setting, system sounds are not audible. In the "100%" setting the maximum volume is reached.

Alternatively, you can also adjust the volume using the buttons - (5) or + (3).


- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (2).

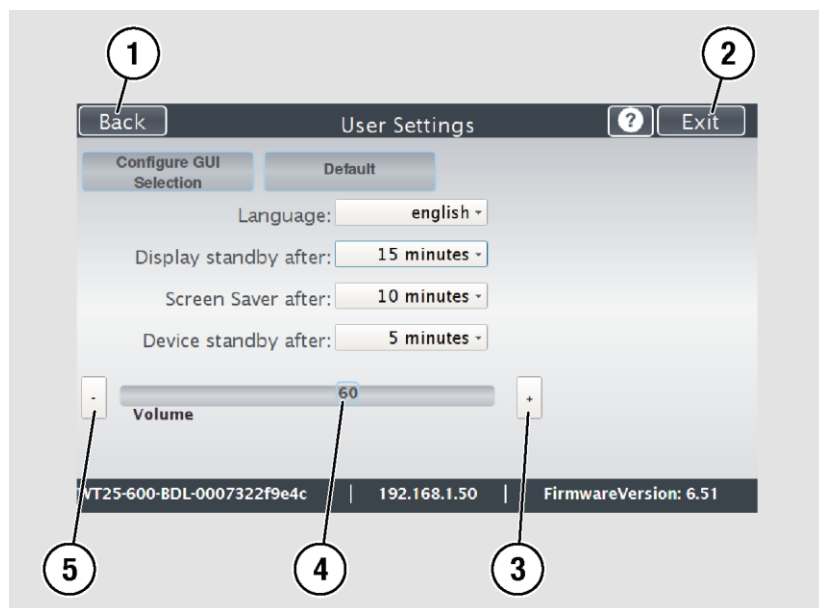

The "Start screen" is displayed.

Configuring the GUI Selection


- Tap the "User Settings" screen on CONFIGURE GUI SELECTION (1).

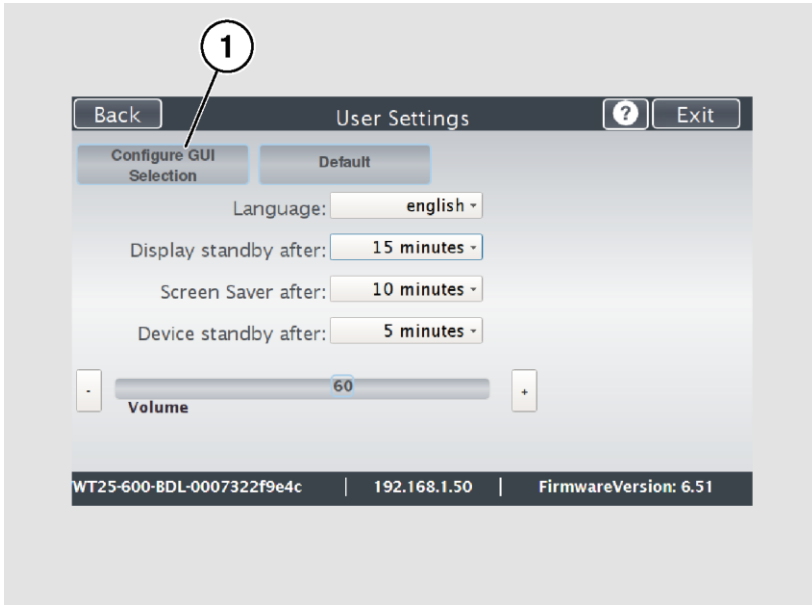

The "Configure GUI Selection" screen is displayed.

This menu displays the "EasyScan" and "ScanWizard" applications, which are available as a standard selection. If, after system start you want to display only one of the applications, proceed as follows:


- Under "Displays" (1) disable the box corresponding to the application you do not want to display.

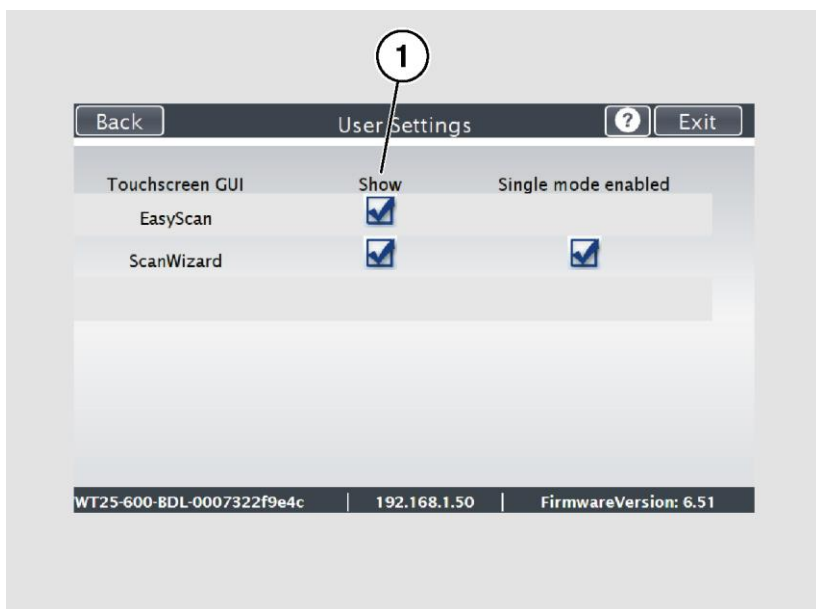

Perform Setup

By default, job mode is defined (disable the checkbox "Single mode enabled").

- To start the application in standalone mode, check the checkbox "Single mode enabled" (2).
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (3).

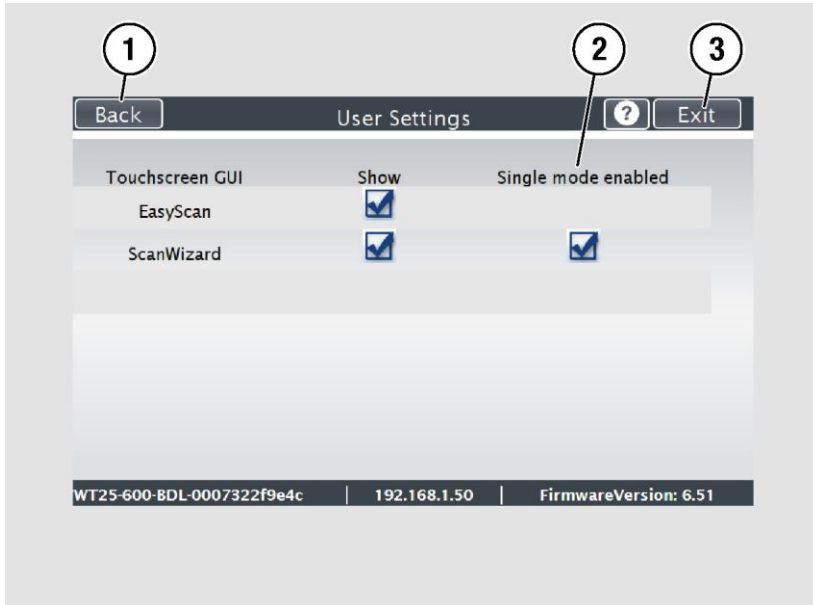


Set the Time and Date

➤ On the "Setup Menu" screen, tap on TIME and DATE (1).



The screen "Time and Date" appears.

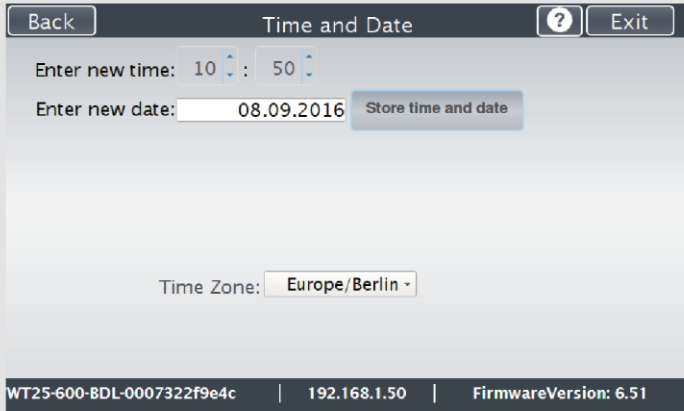

Back Time and Date ? Exit

Enter new time: 10 : 50

Enter new date: 08.09.2016 Store time and date


Time Zone: Europe/Berlin

WT25-600-BDL-0007322f9e4c | 192.168.1.50 | FirmwareVersion: 6.51

Enter new time:	Enter hours and minutes with the arrow keys
Enter new date:	Open a calendar to set the date
Store time and date:	Accept the set values
Time Zone:	Select a time zone

To set the time, proceed as follows:

- Tap the "Enter new time" field.
- To set the time later, tap the up arrow (2).
- To set the time earlier, tap the down arrow (2).
- To save the modified time, click STORE TIME AND DATE (3).
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (4).

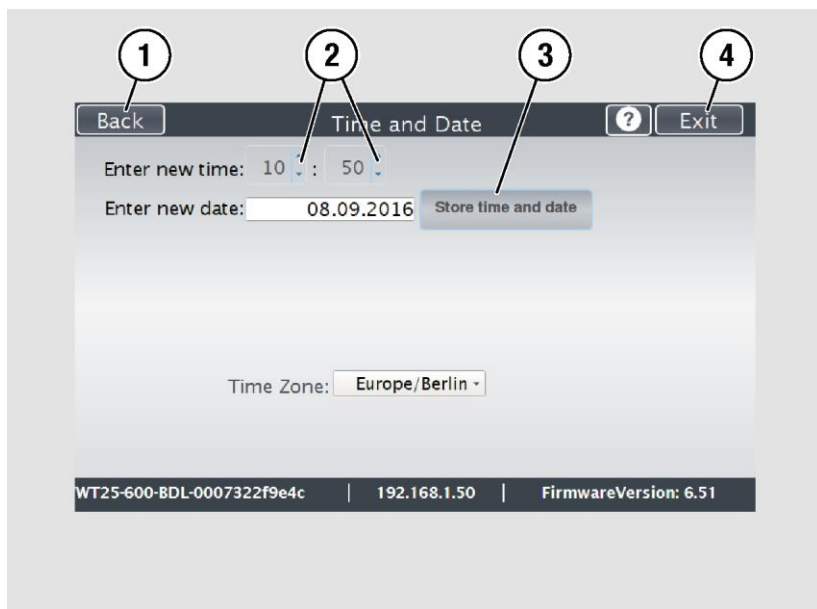

The "Start screen" is displayed.


Perform Setup

To set the date, proceed as follows:

- Tap the "Enter new date" field.


A calendar (3) is displayed.

- Select the appropriate date in the calendar (3).
- To set the month and year, tap the arrow keys (2, 4) at the top of the calendar.
- To set the day, tap the corresponding day in the calendar.
- To save the date, click STORE TIME AND DATE (5).
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (6).

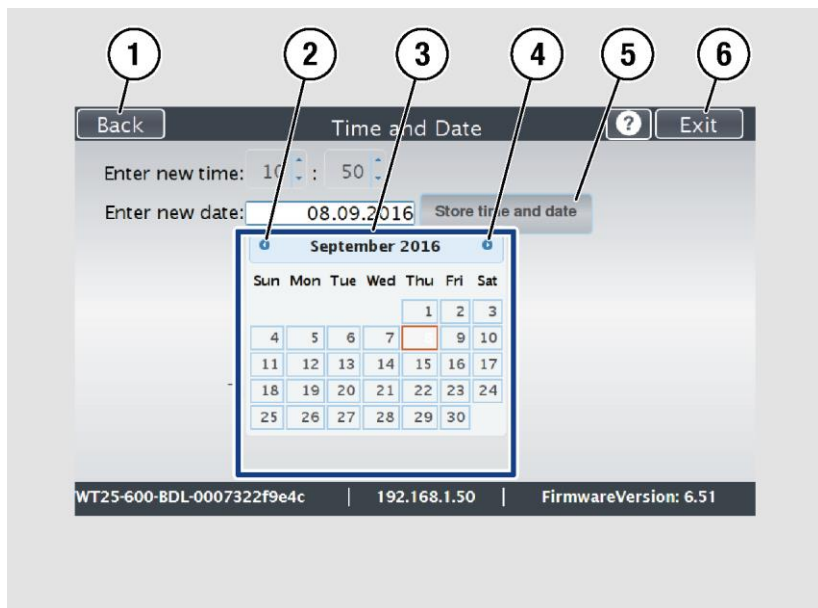

The "Start screen" is displayed.


- To select the time zone, tap the selection arrow (4).
- A selection list with available time zones is displayed.
- Select the appropriate time zone.
- To save the time zone, click STORE TIME AND DATE (2).
- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (3).

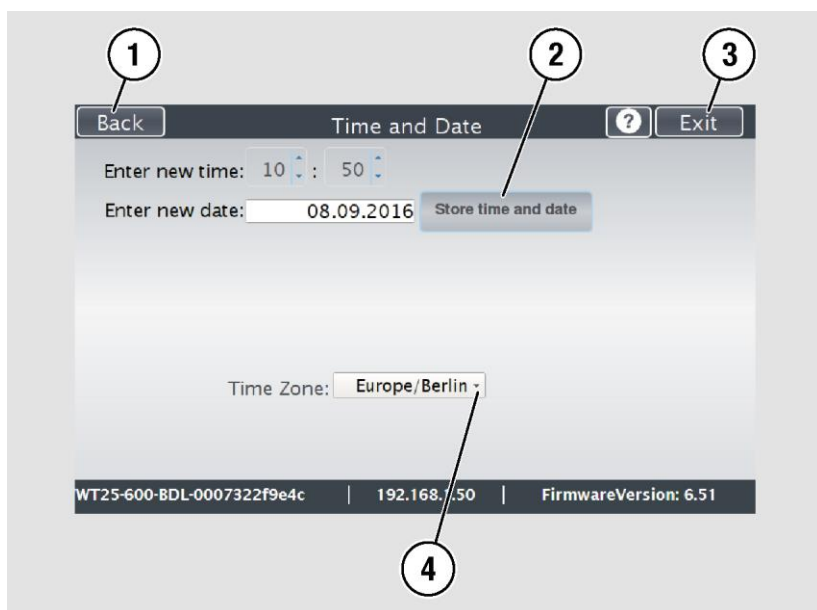


The "Start screen" is displayed.

Perform Test Suite

- On the "Setup Menu" screen, tap on TEST SUITE (1).

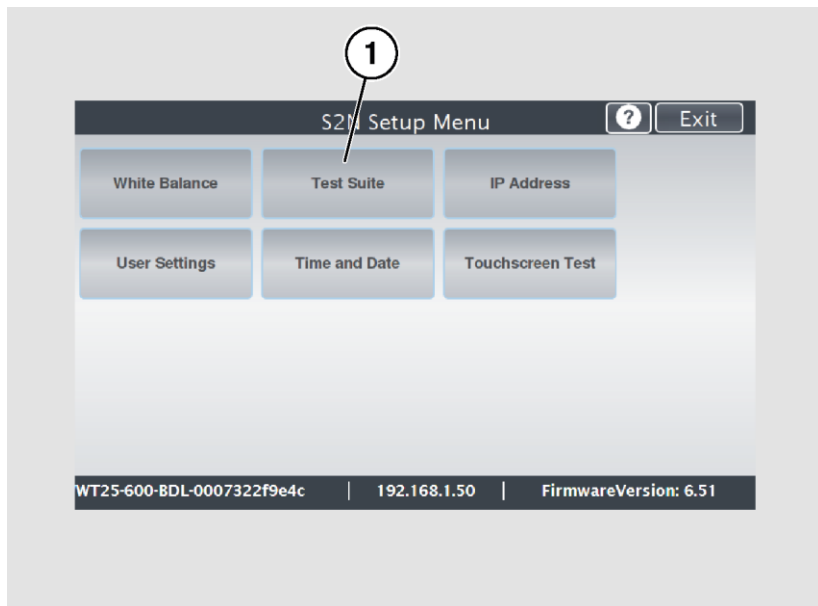

The "Test Suite" screen is displayed.

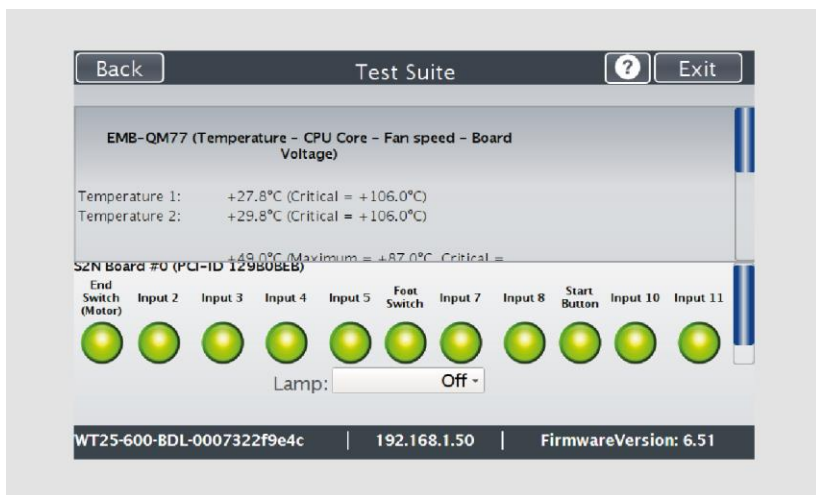

Information about the mainboard:

Information about the inputs:

Information on end position switches, foot switch and power button:

Information about LED lamps:

Display the current values for:

Temperatures, CPU core, fan speed, wiring voltage

Inputs will always appear green

When the end position switches, foot switch or the power button is pressed, the display changes from green to red, for as long as the switch or the button is pressed


Check function: Lamp On, Top, Bottom, Default, Off

Test the LED Lamps Functionality

- To check whether the LED lamps work properly, select from the "Lamp" menu the entry "Lamp on" (3).

The LED lamps are illuminated.

- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (2).

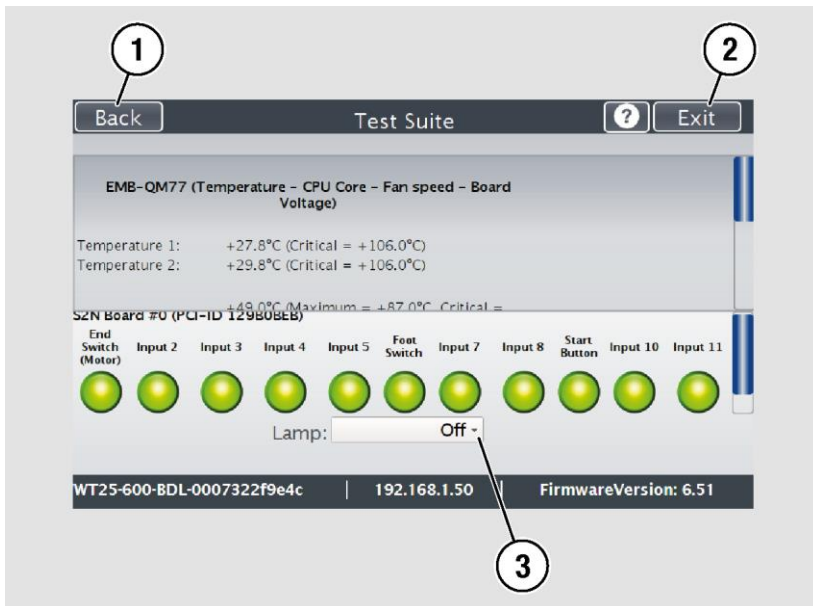


Test the Optional Foot Switch Functionality

- To check whether the actuation of the foot switch is detected by the system, press down the connected foot switch.

The field "Foot Switch" (3) is shown in red. Pressing the foot switch is detected by the system.

- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (2).

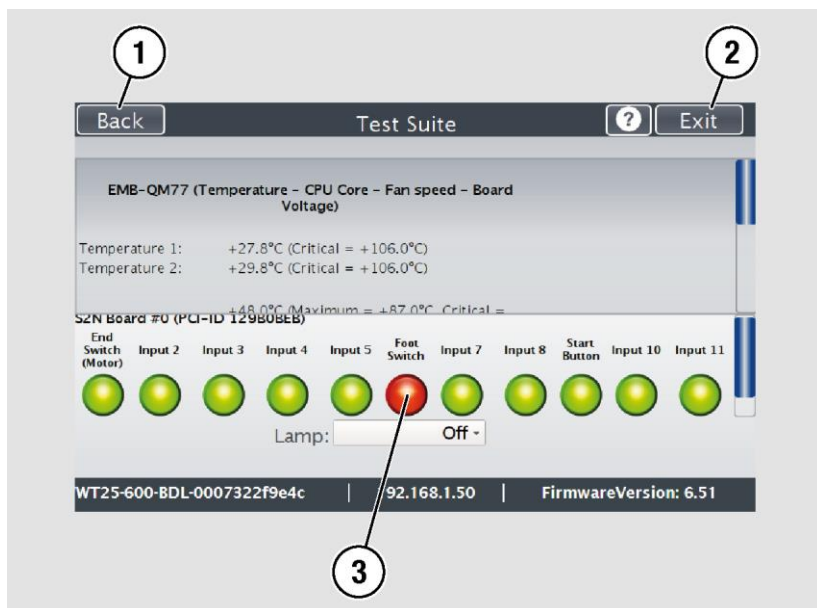


Test the Power Button Functionality

- To check whether pressing the power button is recognized by the system, press and hold the power button for one or two seconds.

The field "Start Button" (3) is shown in red. Pressing the power button is detected by the system.


- To return to the previous submenu, tap BACK (1).
- To return to the "Start screen", tap EXIT (2).

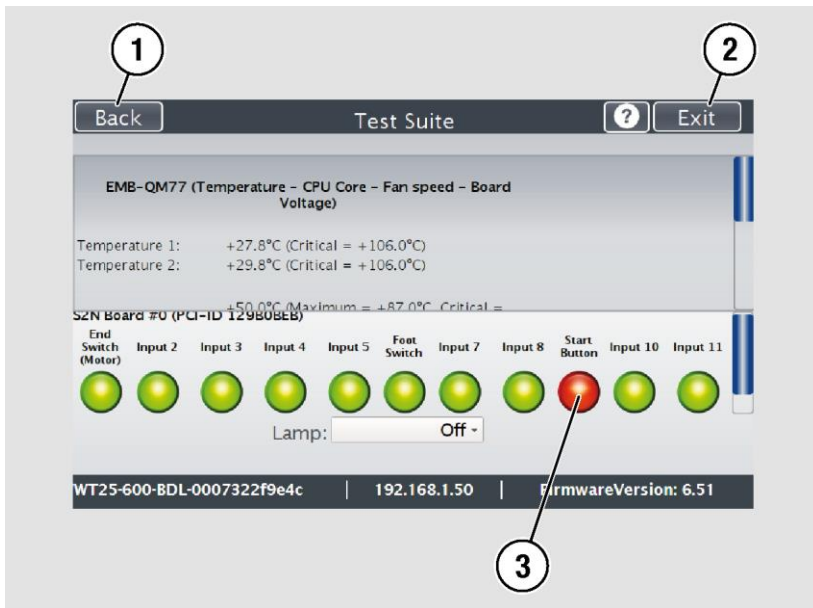

Touchscreen Test

To check the functionality of the touchscreen when touched, proceed as follows:

- On the "Setup Menu" screen tap on TOUCHSCREEN TEST (1).

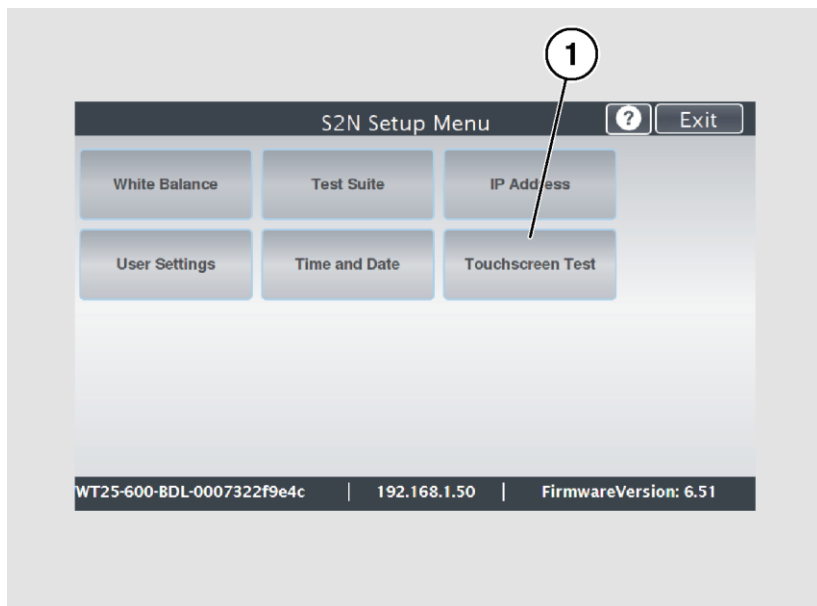


The "Touchscreen test" screen is displayed.

➤ Tap with your finger on the corresponding screen (2).

The cross-lines must occupy the same position as the finger.

➤ To end the "Touchscreen test", tap STOP TOUCHSCREEN TEST (1).

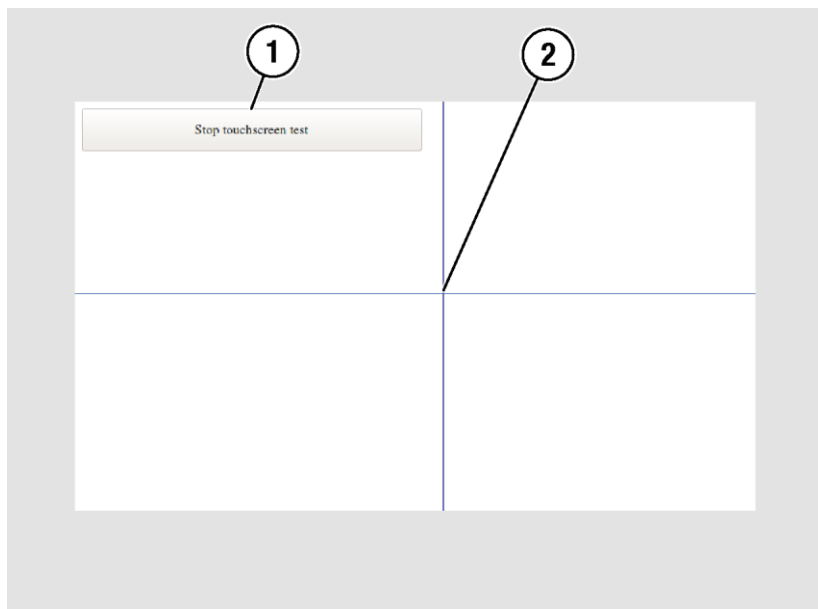


The "Start screen" is displayed.

Switch Off the Scanner

To switch the scanner to standby mode after performing the setup, proceed as follows:

- On the "Start screen" screen tap on SHUTDOWN (1).

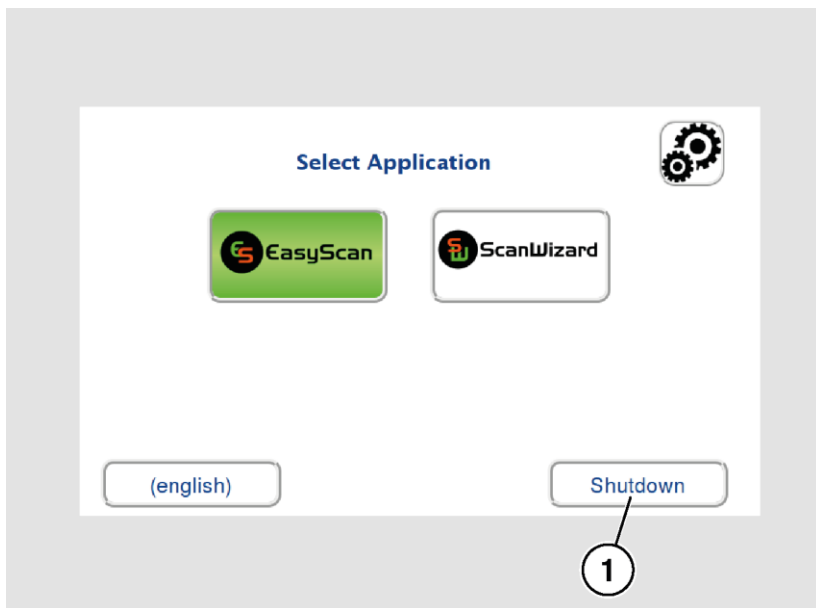

- Confirm with YES.

The scanner shuts down. This process can take up to 40 seconds.

The power button lights up red. The scanner is in standby mode.

Alternatively, switch the scanner into the standby mode as follows:

- Press the blue illuminated power button and hold it for six seconds.

The scanner shuts down. This process can take up to 40 seconds.


The power button lights up red. The scanner is in standby mode.

To switch off the scanner for longer periods, proceed as follows:

- Make sure that the scanner is in standby mode.

The power button is illuminated in red.

- Press the MAIN SWITCH (1) in the "0" position.

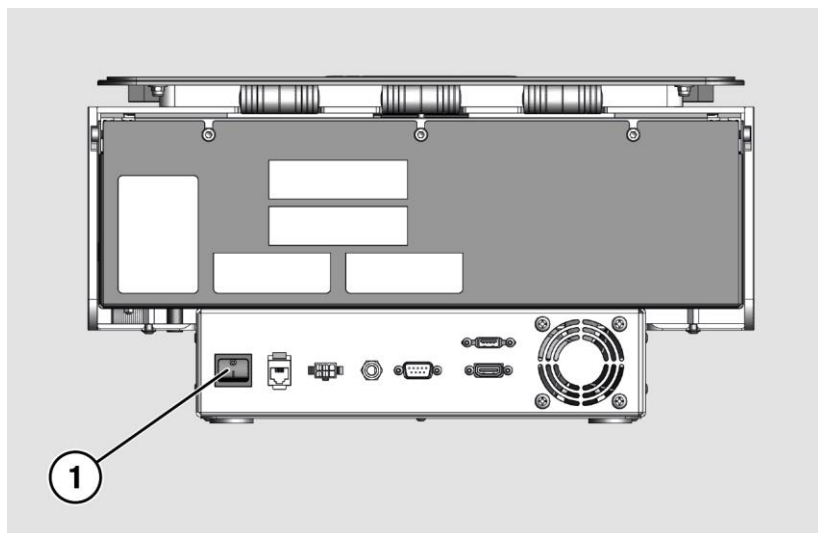

Technical Specifications

WideTEK® 12 Scanner Specifications

Optical system

Maximum document size	317 × 470 mm / 12.5 x 18.5 inches
Scanner resolution	1200 × 1200 dpi (Optional 9600 × 9600 dpi interpolated)
Visual resolution	1200 × 600 dpi
Pixel size	9.3 + 9.3 µm
Camera	Tri-color CCD, encapsulated and dust-proof
Color depth	12-bit grayscale (internal resolution) 36-bit color (internal resolution)
Sensor resolution	22,500 pixels
Scan modes	24-bit color, 8-bit color indexed 8-bit grayscale, binary, enhanced halftone
Scan accuracy	Better than ± 0.1% over max. scan area

Lighting

Light source	Two lights with 54 white LEDs per lamp
Warm-up time of the lamp	None. After switching on max. brightness.
Temperature-induced change	None
UV / IR radiation	None
LED life	50,000 hour (typically)

Glass Plate

Maximum permissible document weight	10 kg
-------------------------------------	-------

WideTEK® 25 Scanner Specifications

Optical system

Maximum document size	635 × 470 mm / 25 x 18.5 inches
Scanner resolution	1200 × 1200 dpi (Optional 9600 × 9600 dpi interpolated)
Visual resolution	1200 × 600 dpi
Pixel size	9.3 + 9.3 μm
Camera	two Tri-color CCDs, encapsulated and dust-proof
Color depth	12-bit grayscale (internal resolution) 36-bit color (internal resolution)
Sensor resolution	45,000 Pixel (2 × 22,500)
Scan modes	24-bit color, 8-bit color indexed 8-bit grayscale, binary, enhanced halftone
Scan accuracy	Better than ± 0.1% over max. scan area

Lighting

Light source	Two lamps with 108 white LEDs per lamp
Warm-up time of the lamp	None. After switching on max. brightness.
Temperature-induced change	None
UV / IR radiation	None
LED life	50,000 hour (typically)

Glass Plate

Maximum permissible document weight	10 kg
-------------------------------------	-------

Ambient Conditions

Ambient temperature during operation	+5 to +40 °C
Storage temperature	0 to +60 °C
Relative humidity	20 to 80% (non-condensing)
WideTEK® 12 noise development	≤ 40 dB(A) (scanning) ≤ 25 dB(A) (standby)
WideTEK® 25 noise development	< 42 dB(A) (scanning) < 32 dB(A) (standby)

Electrical Data

External Power Supply

Input voltage	100–240 V AC
Input frequency	47–63 Hz
Input surge current	120 A max. / 264 V AC/
Degree of efficiency	85 %
Ambient temperature	0 to 65 °C
Humidity	20 to 80 % (non-condensing)
ECO Standard	CEC Level VI

Scanner

Voltage	24 V DC
Power	max. 5 A

Power Consumption WideTEK® 12

Sleep mode	≤ 0.5 W
Standby	3.1 W
Operational readiness	38 W
Scanning	55 W

Power Consumption WideTEK® 25

Sleep mode	≤ 0.5 W
Standby	3.1 W
Operational readiness	55 W
Scanning	90 W

Dimensions and Weight WideTEK® 12

Scanner (H × W × D)	222 × 440 × 795 mm 8.8 × 17.4 × 31.3 inch
Weight	28 kg
Transport box (H × W × D)	360 × 520 × 900 mm 14.2 × 20.5 × 35.5 inch
Weight, ready for delivery	40 kg

Dimensions and Weight WideTEK® 25

Scanner (H × W × D)	225 × 760 × 795 mm 8.9 × 29.9 × 31.3 inch
Weight	45 kg
Transport box (H × W × D)	450 × 1200 × 1000 mm 17.7 × 47.2 × 39.4 inch
Weight, ready for delivery	79 kg

End of document